

CARRERA



AKRAM SBITANY & SONS LTD.
Tel: 1700 550 1 10 | www.sbitany.com

CARRERA

User Manual

Stand Garment Steamer
MODEL NO.: GS-32RG



General Safety Guidelines

1. Read the user manual before operating any appliance or equipment
2. To avoid risk of electric shock, do not immerse the equipment in water or use it in damp conditions.
3. While plugging or unplugging a power cord, hold it by the plug. Never pull it by the cord.
4. Do not operate any equipment with a damaged power cord.
5. Check the voltage available at your home and ensure that it matches the voltage mentioned on your appliance before switching it on.
6. Do not attempt to repair the unit in case of any malfunction. Always take it to an authorized service center.
7. Always keep the unit on a dry and flat surface.
8. Do not use any attachments other than the ones supplied by or specified by the manufacturer.
9. Always unplug the unit from the power source during lightning and thunder storms or when the unit is not used for a long period of time.
10. Never leave the unit unattended while in operation especially when children are around.
11. All the equipments are for household use only. Do not use it for commercial purposes.
12. All appliances and equipment are designed for indoor use. Do not use them outdoors unless specifically mentioned in the instruction manual.
13. Do not connect the equipment to an extension cord or multiple socket adaptor. Always connect the unit to the main socket. This is to prevent short circuits and sparking which can shorten the life of the unit.
14. Do not let the power cord to hang over the edge of the table or work surface since a sharp edge can damage the cable over a period of time. Do not let it get tangled or come into contact with a hot surface.
15. The units can be cleaned with a damp cloth and Immediately wiped dry. Do not use detergents or chemical cleaning agents to clean the unit.
16. Never touch any appliance or equipment with wet or damp hands.
17. If power cord is damaged, please replaced by the service center or the person who designated by the manufacturer or a qualified person to avoid electric shock.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of Experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children's should be supervised to ensure that they do not play with the appliance.
20. Warning: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
21. When using handheld steamer, you should not touch the 'hot surface' with your hand



Product Introduction

Features and Purpose:

Thank you for choosing our Garment Steamer.

The device is a kind of strong steam ironing machine with cleaning function as a supplement It is elegant in design, simple, economical and safe, especially applicable for household, garment, wedding dress, curtain, sofa, hotel, restaurant, etc. The machine Irons especially well the pure silk, woolens, chemical fiber, cotton and blending textiles, flattens them fast without damage and also sterilizes and cleans them. However, it only asks easy maintenance and repair.

Precautions

Safe Protection

1. Thermostat

The thermostat would keep the temperature at a rated value by means of the control current when the tank is short of water.

2. Thermal fuse

In case the thermostat damages or fails, the Thermal fuse of protective device gives protection by cutting off the power supply of machine body when the machine reaches a certain temperature.

Warning:

- * It should be taken care when using the appliance due to the emission of steam.
- * Unplug the appliance during filling and cleaning.
- ^A If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- * Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge If they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- * Do not eject the steam directly towards people or animal, or scald may be caused.
- * Only use the detachable accessories when there is no steam and they are cooled down to avoid scalds.
- * Conduct the installation in accordance with the instructions. Do not dismantle without authorization.

- * The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

Notices

- * Do not operate the machine unless you read this manual thoroughly. The machine can only be used indoors.
- * The machine can only be used for the purposes described in this manual. Utilization for other purposes is prohibited.
- * The water for the machine shall be domestic potable water to avoid contaminating the textiles. Purified water is recommended.
- * Make sure the working voltage of the machine accords with your domestic supply voltage and the machine is connected to power supply mounted with 30mA creepage protection switch. Only the firmly grounded 3-pole socket is applicable for the machine. The rated current shall be not less than 15A.
- * Thoroughly stretch the power cords before use. Avoid sharing the same power supply with other high-power electric appliances. Do not use wiring board in order to prevent fires arising from the wiring board overloaded.
- * Before operation, connect all the necessary ironing or cleaning accessories, fill the outer tank to full and then turn on the power supply switch.
- * Thoroughly stretch the expansion link to ensure that the steam hose is unobstructed and untwisted and other functions perform well.
- * The machine shall be put on a flat and stable place.
- * Do not fill hot water in the tank, or the tank would deform. Fill water before operation and observe the water level from time to time. Add water to proper volume in case it is below the designed water level.
- * Do not directly put the machine under water tap to fill water.
- * Do not fill solutions such as detergent into the tank.
- * Keep power cords and steam pipes from metals or other heating elements.
- * Do not leave the machine operating without attention.
- * The machine shall not be operated by these people (including children): the physically, tactilely or mentally disabled or those who lack of experience and knowledge, unless they are supervised or guided by someone who is responsible for their safety in respect of the application of the machine.
- * During operation, keep the ironing brush away from people, animal or domestic electric appliance. When the machine is not in use, turn off the steam jet switch and put the ironing brush on the support to avoid steam hurting people or damage things.


Notices

- * During operation, do not touch the steam jet outlet and steam conduit of the ironing brush or drag the power cords.
- * Do not put on floor or distort the steam conduit, or accidents may be caused by the steam jammed in the steam conduit when it is squeezed.
- * Do not drag the steam conduit by force or to move the machine, or the steam conduit may be damaged or steam may leak.
- * Do not pull out or plug in the steam conduit when the machine is still hot but only when the machine is cooled down, thus to avoid scald.
- * If the ironing brush falls, has visible damage or is leaking, stop using it.
- * To avoid scald by steam, after operation, turn off the power supply, pull out the plug and, when the machine is cooled down, pour out the remnant water, and then have the machine packed and stored. However, let the machine air dried before packing and storage. Do not pull put the plug by dragging the power cord.
- * Use dry soft cloth and neutral detergent to clean the machine surface and do not use solvents such as gasoline, alcohol, banana oil, etc. Prevent liquids penetrating into the machine.
- * Do not soak the machine, power cord or plug in water or other solutions. Do not keep the machine in places which are damp, exposed or of corrosive gases.
- * Keep the machine away from flammable or explosive objects.
- * Please clean the filter sieve at regular intervals to keep it available. The machine shall be cleaned or maintained from time to time (every 1 month or 20L water is consumed). (See the following sections for the cleaning and maintenance)
- * Push the support pole to move the machine. Do not move the machine by force when it is tough to be moved. Discharge the water before checking the wheels. Turn off the power supply and pull out the plug before moving the machine.
- * Turn off the power supply and pull out the plug before discharging water from or filling water in the tank. Avoid water leakage. Do not open or take down the tank in use.
- * If find any damage on the accessories especially the safe protection and power cord, stop using the machine and inform our professional personnel of service center for repair. Do not repair at your own discretion.
- * Before cleaning or repairing the machine, turn off the power supply, pull out the plug, release the pressure inside the heating element of the base and let the machine cool down.

Do abide by the following for the safety of yourself and others.

Notices	
Plug the power plug in thoroughly to avoid electric shock, as well as open circuit, short circuit, smoking and flammation caused by over-heat of Plug.	Use the socket with rated voltage of 220V-240V separately from other electric appliances, otherwise, fire may occur due to heat.
No watering: danger of short circuit . and electric shock.	Do not pull or plug the plug with wet hand in respect of electric shock.
Do not use broken or loose socket in respect of electric shock, short circuit and flammation	Keep away from the steam hole to avoid bum.
Do not intend to refit, remove or repair the product in respect of fire, electric shock or other injuries.	Keep it away from the children or others unable to operate.
Do not insert the metal needle into heat dissipation hole or clearance in respect of injury caused by electric shock.	Remove the dust on power plug at regular intervals, otherwise, fire accident may occur due to poor insulation.
Do not put the product in water or damp environment or close to other heat sources, and do not put the inner boiler on the naked fire.	Do not touch the hot part, especially the surface of steam jet of ironing brush during or after the operation.
Hold the plug rather than haul the power cord to pull out the power plug.	Do use the attached power cord which shall not be used for other equipment.
Do not operate on the unstable platform or cushions which could not receive heat in respect of injury or fire caused by fallen ironing brush.	If not in use, pull the power plug out of the socket to avoid electric shock, creepage and fire arising from damages and insulation ageing.
Wash the ironing brush after totally cooling down to avoid scald.	Do not put it close to wall or furniture in case the steam leads to color change or distortion of which. Keep it over 30cm away from the wall and furniture.

Product View

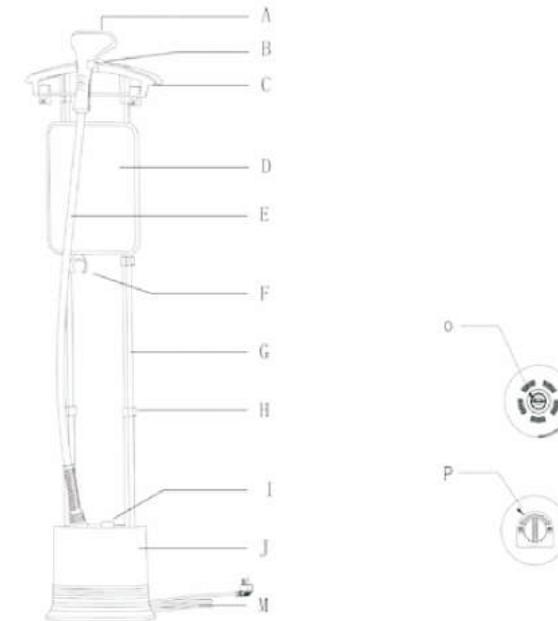

- A: Iron brush
- C: Hanger
- E: Steam pipe
- G: Aluminum tube
- I: On/off Switch and steam control
- M: Power Cable
- P: Water outlet knob

- B: hook on hanger
- D: Iron board
- F: hook on iron board
- H: Clip on Aluminum tube
- J: Main body
- O: Drain outlet knob

Product Accessories

The product consists of the machine body (including water tank), ironing brush, hanger, telescopic pole, Flexible fabric hose, Trousers clip, Small ironing plate , glove and Iron board.



Q. Brush




I. Trousers clip



S. Glove

Steam control

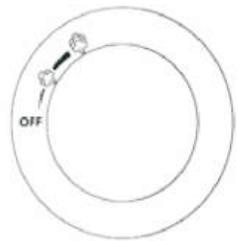

For Linen/Barret/Lint



For Cotton/Silk/Fiber

Product Installation

1. Assemble Support pole




- 1) Take out the machine and accessories.
- 2) Take out the support pole, insert the support pole into the hole on the machine body until it reaches the bottom.

2. Assemble hanger



- 1) Insert the hanger into the top of support pole.
- 2) Fix the small AL pole into the hanger

3. Adjust the height of support pole.

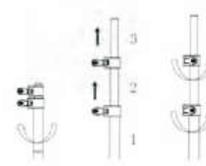

1).Release the clip in the support pole ,adjust the support pole into need height,fasten the clip.

2) Take out the ironing brush, align the plug of ironing brush with and insert it into the corresponding hole on machine body, and tighten it clockwise. After finish use, please pull out the ironing brush .

4. Assemble Iron brush



5. Assemble brush or Pants line clip



1).Insert the tube in back of Iron board into the holes of hanger , let the Iron fix on the hanger, take the hook in Iron board out, during the ironing, iron brush can put into the hook

2) Insert the buckle in back of Iron board into the holes of telescopic tube,Iron board can be supported ironing

6. Assemble the Iron board



Ironing:

1. Stand the machine assembled on flat and stable floor. Adjust the height and spread range of the hanger as required and hang the clothes on it. Ensure there is enough water in the water tank and the tank is located properly. Plug the plug into the power socket, turn on the power switch. Let the machine preheat for about 30s, waiting for steam of ironing brush.

A

When the ironing brush shake or move from side to side, water bead may be appeared on the handle of ironing brush (Danger of scalding).

2. Iron from the main part of clothes, hold the lower hem by hand gently to make the wrinkled part flat and iron the rippled fibers out by the hot steam (as shown in Picture 2).



Picture 1

Picture

2

Picture 3

3. Press gently the metal panel of ironing brush on the clothes, move the brush up and down at such a speed that the steam penetrates into the fibers appropriately for hot forming.

4. After ironing the main part, ironing the specific parts from up to down. When ironing the collar, you may fold the whole collar back, hold one end of the collar by hand, move the ironing brush horizontally and, during when, be careful of the hot steam (as shown in Picture 3).
5. When ironing the sleeves, pull the sleeves to straight and move the ironing brush along he sleeves (as shown in Picture 4).
6. When ironing the lower hem of clothes, hold one side of the clothes, prop up the lower hem with the extension pole and move the ironing brush horizontally (as shown in Picture 5).
7. After ironing the front of clothes, turn the clothes over to iron its back.



Picture 4



Picture 5



Picture 6



Picture 7

8. When ironing the collar part of the garment, please use the small iron tool to make the collar more stiff, (as shown in Picture 6).
9. Use the button in back of Iron board , let the Iron board fix on the hanger, take the hook in Iron board out, during the ironing, iron brush can put into the hook. Adjust the height of the telescopic poles , you can iron more efficiency on the Iron board. Iron board also can be fixed on the telescopic tube ,it can be make a support during the ironing, (as shown in Picture 7).

Ironing Pants Line:

Take out the pants line clip, insert the metallic clasps at bottom of ironing brush into plastic slot of the pants line clip, press down the handle to open the interface between pants line clip and ironing brush, clasp the pants line and move the ironing brush gently up and down to make the pants line rightly straight. The dismantling is in a reverse order.



1. When the steam tube bending ,it happen to emit cooing sound. Water bead may be appeared on the steam holes and the amount of steam will decrease significantly. Lift the handle for 2-3 seconds in this case, everything will be ok.

Product Maintenance

1. Purified water is recommended in order to avoid contaminating the textiles.

The contents of mineral substance differ in various kinds of water, so there would be sediments to respective extents if the ironing machine is applied with water of different qualities, which makes the steam flow lessens, intermits or even stops. Purified water is recommended in order to avoid contaminating the textiles.

2. To better maintain the machine, the machine, when used for a certain period, may be cleaned or maintained as follows, in which we suggest to take the both steps together:

* Cleaning the water tank

»>Related parts: water tank and tank filter

»>Cleaning frequency: Clean every 1 month or 20L water is consumed, which period may be prolonged or shortened according to the actual water quality.

»> Cleaning steps:

- 1) . Screw out counterclockwise the water tank cover;
- 2) . Pour the remnant water out of the tank;

*Heat clean instruction

Garment Steamer if use in long-term high-temperature ,will produce the calcium carbonate and salt powder scale .After long term using ,the scale will cause the pipe block,heater operation heavier load, effect the steamer. Specific performance is less steam than before or stop to spray steam .In order to have a better effect of the garment steamer, recommend regular cleaning of steamer heater, remove the scale. In the calculation of half-hour daily the suggestion for the soft water areas is cleaner on time in two or three months .hard water areas is cleaned one time in two or three months, hard water areas is cleaned one time in one or two months

Cleaning methods are as follows:

- 1) .Add white vinegar and water into the tank .mixed in a ratio of 1:1 to fill
- 2) .Put the tank onto machine .plug in the power cord, turn on the switch ,let the machine runs for about 10 minutes
- 3) .After running for 10 minutes, turn off the power .unplug it .remove the mixture.
- 4) .Then add some water into the tank, lift up the machines swinging around a few times,and remove the water . Do this procedure several times repeatedly, until the

residual scale and vinegar flavor is removed.

3. Storage

* Keep the machine in a dry, cool and ventilated place and away from flammable and explosive objects.

* Keep properly the hood of connecting hole and put it back when pulling out the ironing brush after the work is done, in order to prevent water and dust away from the connecting hole.

Fault Recovery

Fault Recovery		
Fault	Cause	Solution
The machine does not work or the indicator light of switch is not lighted	Power-off or fusion of fuse	Check and confirm
	The socket is not connected or plugged in properly	Connect to the power supply and ensure the plug is plugged in thoroughly
	Unfavorable connection of socket	Check whether the power socket is normal or not
	The power switch is not turned on	Turn on the power switch
The indicator light is on but there is no steam	The water in water tank does not reach the designed water level	Fill water promptly
	The water tank is not installed in position	Install the water tank in position
	Severe inflection of steam conduit	Straighten the steam conduit
	Water don't flow into boiler	Shaking water tank or re-placed the water tank
The accessories of ironing brush are not fastened	Unaligned grip	Realign and fasten the snap close
Less, discontinuous or no steam	The water in water tank does not reach the designed water level	Fill water promptly
	The water tank is not installed in position	Install the water tank in position
	Severe inflection of steam conduit	Straighten the steam conduit
	Less volume of steam	Blockage of filter sieve
Blockage of water tank		Wash the filter sieve of water tank